

How to mount MAD4ONE Cranks

1) Use grease



2) Insert half pin




3) Insert crank to fill the hollow



4) All pin have to touch the spacer –
Use gently a rubber hammer



5) Use the allen key to push the crank

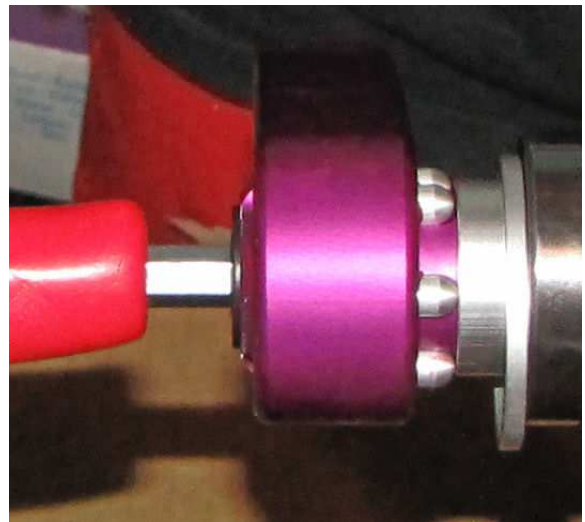

6) Tighten with the allen key like a std crank

